

## MT15 Installation Guide - Indoor Air Quality w/CO2

Media, iframe, embed and object tags are not supported inside of a PDF.

### Overview

The Cisco Meraki MT15 is a cloud managed Indoor Air Quality with CO2 Sensor that is exceptionally simple to deploy and configure due to its integration into the Meraki dashboard and the use of BLE technology. The MT family eliminates the complex and costly setups required by traditional solutions which removes the limitations of placement of these sensors.

### About this Guide

This guide provides instructions on how to install and configure your MT15 Environmental Sensors.

### Product Overview

#### Physical Specifications

- |                       |  |
|-----------------------|--|
| Power                 | <ul style="list-style-type: none"><li>• PoE; 802.3af (Power Only)</li><li>• Permanent DC Power: 5V;2A USB-C (Sold separately)</li></ul>  |
| Operating Environment | <ul style="list-style-type: none"><li>• <b>Temperature:</b> 0°C - 55°C(32F - 131F)</li><li>• <b>Relative Humidity:</b> 0 - 95 % RH</li></ul>   |
| Hardware              | <ul style="list-style-type: none"><li>• Multicolor, multifunction LED Ring</li><li>• General purpose button</li><li>• Reset button</li><li>• USB-C Port (Power Only)</li><li>• PoE Port (Power Only)</li></ul> |

---

## List of Compatible Gateways:

### MV

### MR

Gen2: MV2, MV12(W/WE/N), MV22(X), MV32, MV72(X)

Gen3: MV13/M, MV23M/X, MV33/M, MV63/M/X, MV73M/X, MV93/M/X

Wi-Fi 5 Wave 2 APs - MR33, MR42, MR42E, MR52, MR53, MR53E, MR74, MR84

Wi-Fi 6 APs - MR28, MR36, MR36H, MR44, MR45, MR46, MR46E, MR55, MR56, MR76, MR78, MR86

Wi-Fi 6E APs - MR57, CW9162I-MR, CW9164I-MR, CW9166I-MR, CW9163E-MR

---

## Minimum Firmware Versions:

### MV

### MR

MV12(W/WE/N), MV22(X), MV32, MV72(X) - MV 4.8+

MV2 - MV 4.17+

MV13/M, MV23M/X, MV33/M, MV63/M/X, MV73M/X, MV93/M/X - MV 5.0+

Wi-Fi 5 APs - MR 28.6+

Wi-Fi 6 APs - MR 27.6+

Wi-Fi 6E APs - MR 28.6+

Please refer to [Managing Firmware Upgrades](#) to schedule an upgrade.

---


## General Purpose Button

The MT15 has a general purpose button on the top which allows you to wake up the sensor and test if it is able to connect to a gateway.

---

## Multicolor, multifunction LED Ring

MT15 is the first MT Sensor which can visually indicate the conditions of the environment without the use of the Meraki Dashboard. This is done via the LED Ring on the front of the device, which can represent any of the measured metrics and is configurable via the dashboard.

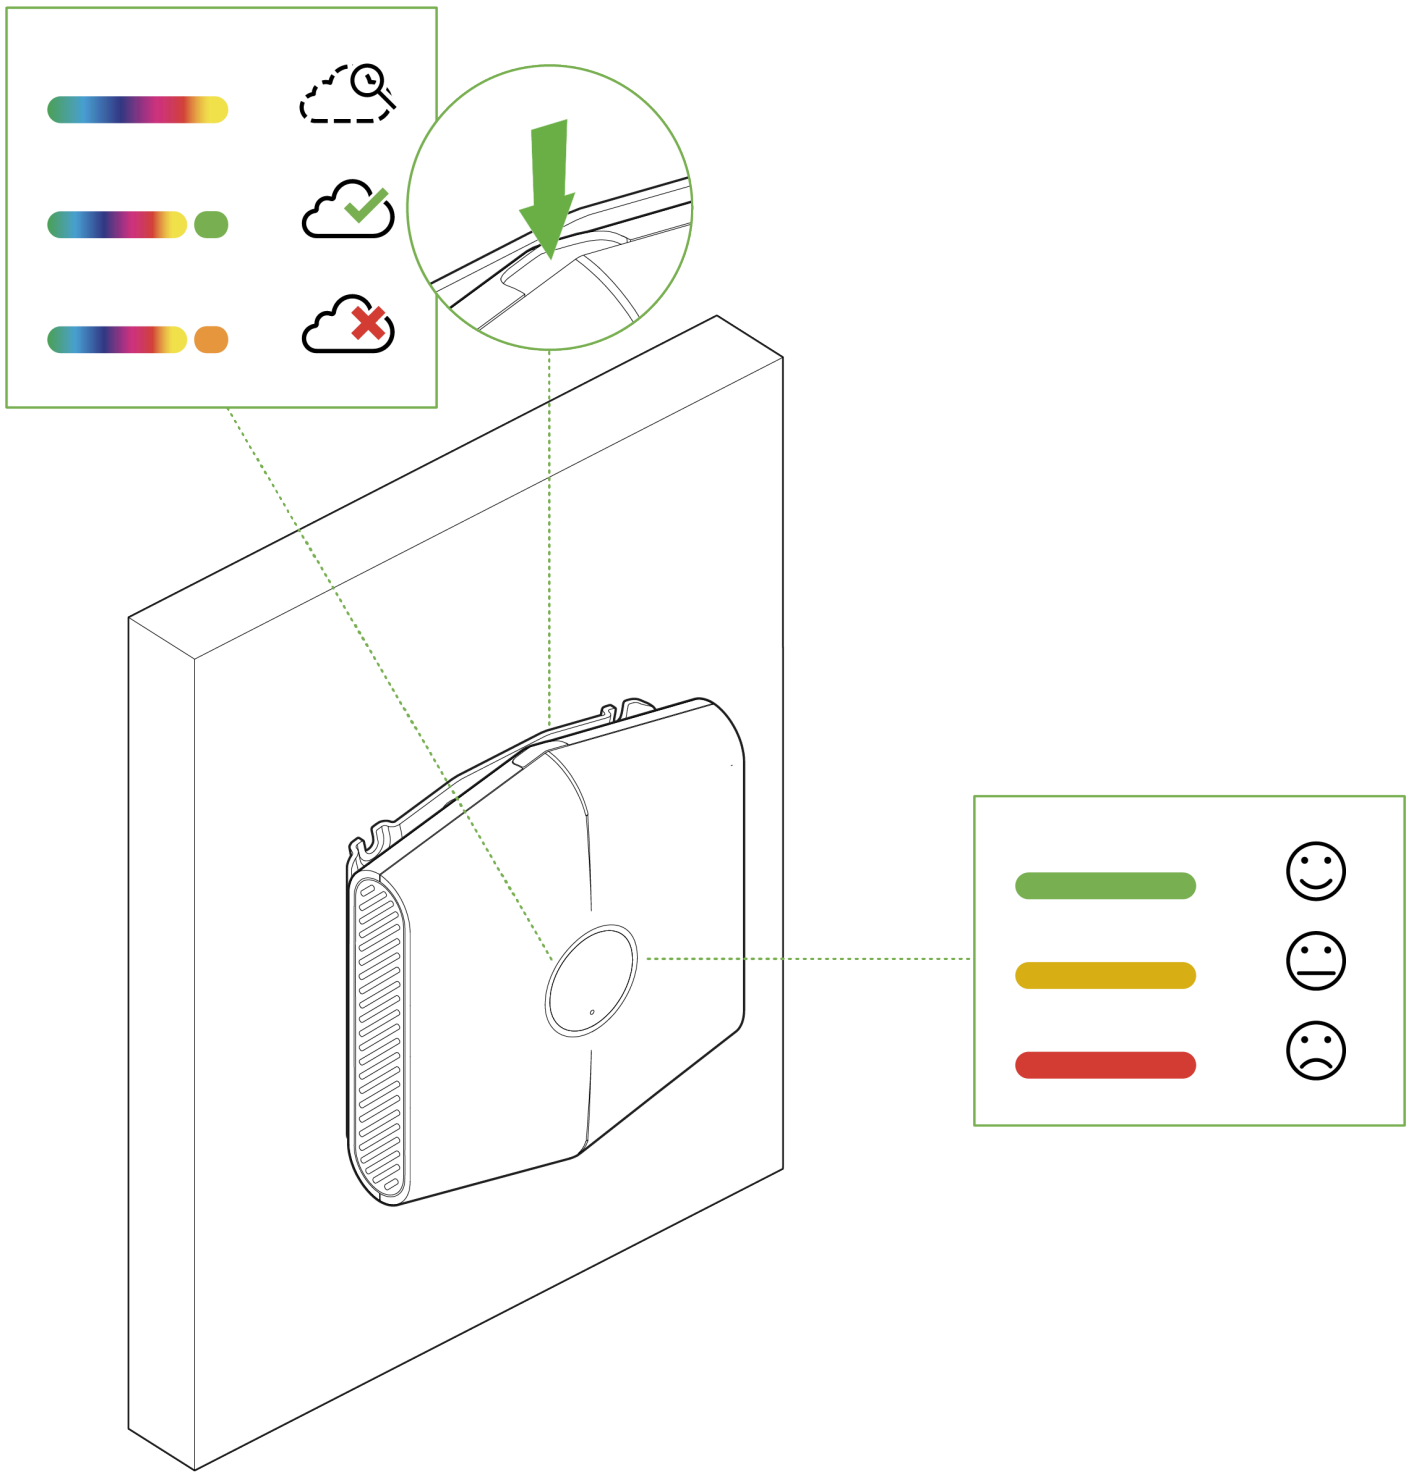

## Factory Reset Button

On the back of the sensor, there is a pinhole button to factory reset the sensor. If the button is pressed and held for at least five seconds and then released, the sensor will reboot and it will be restored to its original factory settings by deleting all configuration information stored on the unit.

---

## USB-C Port

The MT15 sensors have a USB-C Port on the back that can be used to provide an alternate source of power using a compatible accessory.

---

## RJ45 Port


The MT15 sensor also has a RJ45 port for PoE on the bottom that can be used to provide an persistent source of power using a PoE switch.




**RJ45 and USB-C are ONLY used for Powering the Device. An ethernet link between MT15 and the upstream switch port will NOT be established. An MV or MR Gateway is still required.**

---

## Package Contents

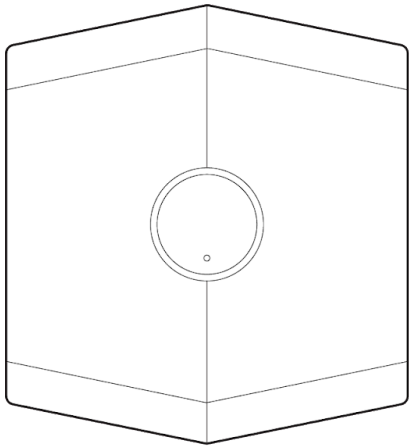

1x

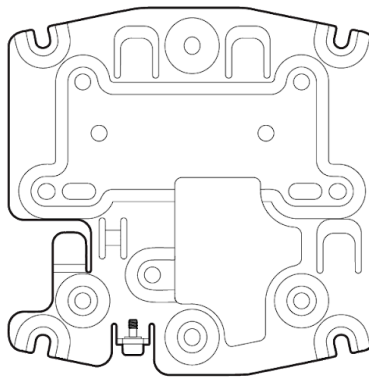

1x



2x



2x

Unit	MT15-HW
Guides	Quick Install Guide
	<a href="#">Wall Mount Backplate</a>
Mounting equipment	2x Mounting Screws
	2x Drywall Anchors
	1x Self-retaining security screw

---

# Pre-Installation Preparation

You should complete the following steps before going on-site to perform an installation.

---

## Configure Your Network in Dashboard

The following is a brief overview only of the steps required to add an MT15 to your network. For detailed instructions about creating, configuring and managing Meraki Sensor networks, refer to the online documentation (<https://documentation.meraki.com/MT>).

1. Login to <http://dashboard.meraki.com>. If this is your first time, create a new account.
2. Find the network to which you plan to add your sensor or create a new network.
3. [Add](#) the sensors to your network. You will need your Meraki order number (found on your invoice) or the serial number of each sensor, which looks like Qxxx-xxxx-xxxx, and is found on the back of the unit or included in the box.
4. Add the gateway(MV or MR) to the **same network** as the sensor.

NOTE: Make sure the gateway is in the same network and is online and operational.

[MV Set up Instructions](#) and [MR Set up Instructions](#).

---

# Installation Instructions

---

## General Guidelines

As the MT15 helps monitor the ambient air quality metrics, The following tips and guidelines should be considered when positioning your MT15:

- Mount the sensor about **6-8 feet** from the ground. This will help the sensor monitor the air quality at the average height of human breath.
- One MT15 has approximately 100 sqft of coverage, meaning at least one MT15 should be installed in every 10x10ft room
- Make sure the MT15 is away from an **inlet** or an **air vent**. Higher air flow near the sensor can result in inaccurate readings.
- Ensure that the MT15 sensor is oriented in an upright position or flat with the LED ring facing down with a clear path for airflow through the vents (right and left sides).



MT15 should only be mounted on a wall in an upright position or ceiling. Any other orientation will cause inconsistencies in readings.

---

## Operating Modes



The MT15 sensors have 2 operating modes:

1. USB-C Powered - Requires a 5V; 0.2A USB-C power adapter to power the sensor.
2. PoE - 802.3af




**NOTE: When powered by PoE, a Gateway is still required for MT15, this is for Power Only.**


## Mounting Instructions

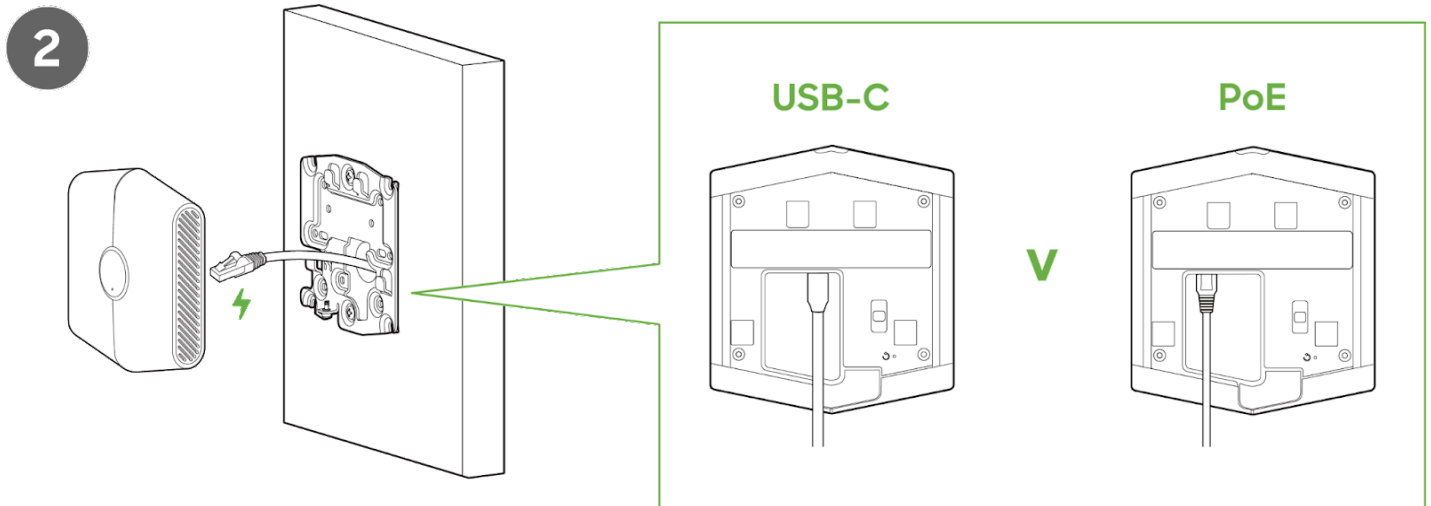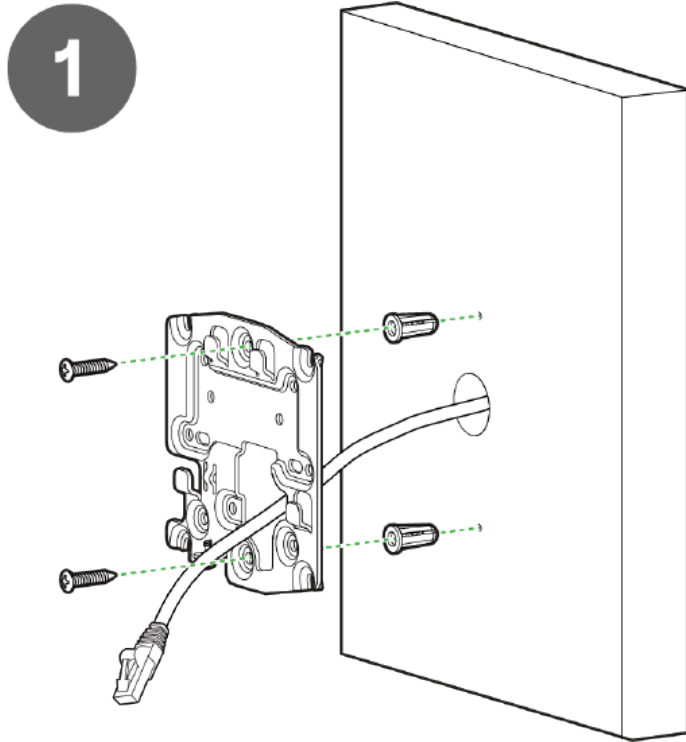

3

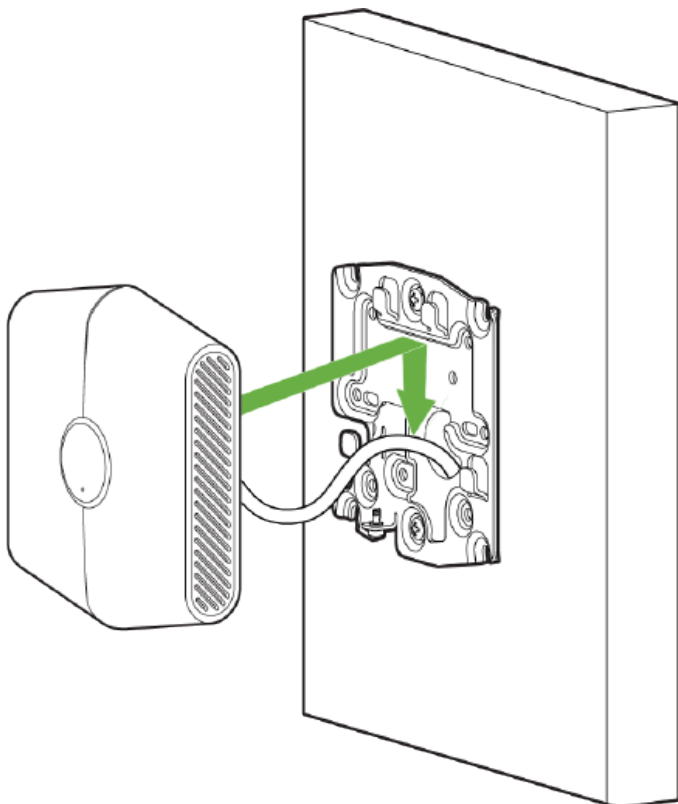

4

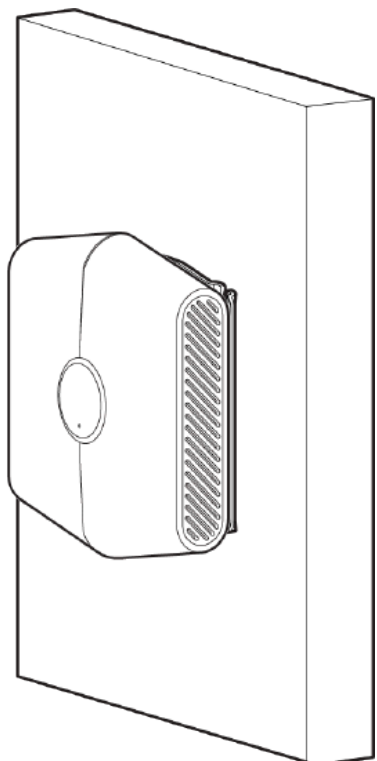


For most mounting scenarios, the MT15 has flexible options to provide quick and simple mounting. The instructions are as follows:


---




**NOTE - It is important to ensure that the sensor is oriented in the correct position for the data collected to be accurate.**

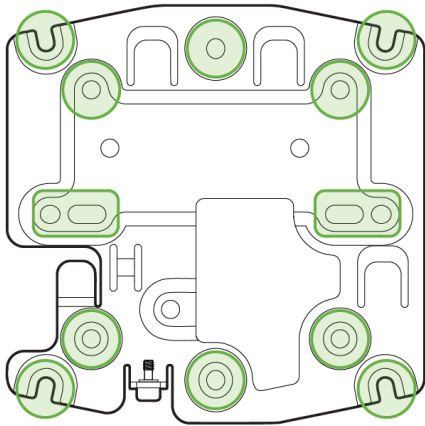

**A**

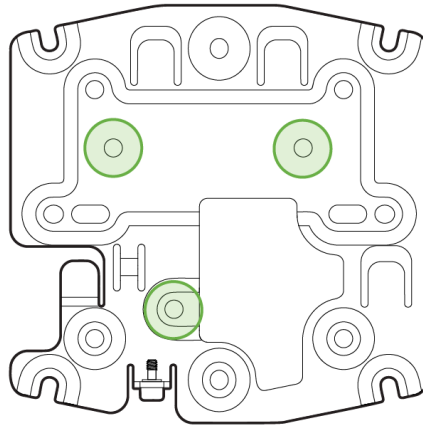

**B**

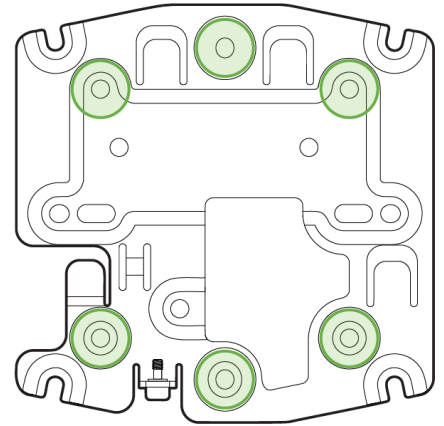

**C**



**Dimensions of the mounting plate is 105mm x 105mm (4.13in x 4.13in).**

1. In order to mount the sensor on different locations, there are 2 supported orientations
  1. Wall - The mounting plate can be directly screwed onto the wall (Option B) or on a Junction Box.
  2. Ceiling - The device can be mounted on a ceiling using the included screws, or by using a T Rail mount (Not included) (Option C), or on a Junction Box (Option A).
2. Once the mounting plate is on the desired surface, slide the MT15 sensor onto the plate.
3. Screw the Security Screw into the MT15.

## Support and Additional Information

If issues are encountered with device installation or additional help is required, contact Meraki Support by logging in to [dashboard.meraki.com](https://dashboard.meraki.com) and opening a case by visiting the Get Help section.

For additional information on Meraki hardware and for other installation guides, please refer to [documentation.meraki.com](https://documentation.meraki.com).